


Inward application of Ficam D.



Art-Nr: AR8-PRO

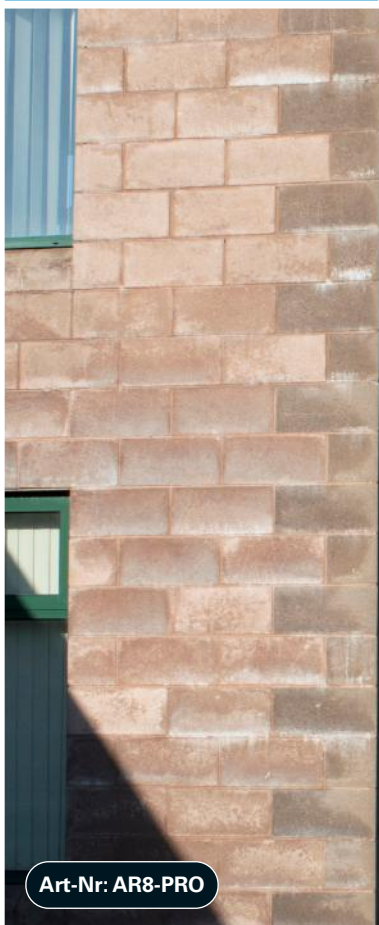

## AR 8 PRO

### TELESCOPIC DUSTING LANCE

Environmentally friendly.  
No CO<sub>2</sub> cartridges required.

### AR 8 PRO Contents of kit

Heavy duty carry case



1L Stainless steel tank and trigger



Lance  
5g Scoop



Powder Chamber



Flexible Nozzle

**Note:** Fine 6 mm flexible nozzle supplied as an accessory.

### Features

- Adjustable telescopic lance made from non-conductive material.
- The 1L stainless steel tank is effortlessly filled to 3 bar pressure before each use with a regular stirrup pump (approx. 9 pump actions = 3 bar). Tank max op 6 – 7 bar.
- Complies with Ficam D label and BPR legislation for treating wasp nests in roofs and eaves of houses when the product is applied from outside.

# AR 3 PRO

Art-Nr: AR3-PRO

## Telescopic dusting lance (3.15 m).



**Note:** For customers who already own an AR 8 Pro, the shorter AR 3 Pro lance and protective carry tube can be purchased as an accessory (without having to purchase the whole AR 3 Pro kit). The AR 8 & AR 3 Pro both have the same 1L stainless steel tank, powder chamber and flexible nozzle.

To purchase an AR 3 Pro lance and protective carry tube please use the following article number.

Art-Nr: AR3-PRO-LO

# AR 8 PRO Conversion kit

## Conversion kit for AR 8 CO<sub>2</sub>, XL 8 and T8 lances



### Product description

This kit contains all the parts required to convert an XL 8, a T8, or an AR 8 CO<sub>2</sub> lance into a fully working AR 8 Pro. The conversion takes under two minutes to complete and the converted lance can be stored inside the original carry case.



# T8 S


## UNIVERSAL LIQUID SPRAY LANCE



Universal connector fits B&G, Birchmeier, Gloria, IK and more.

# T8 D

## PRECISION DUSTING LANCE

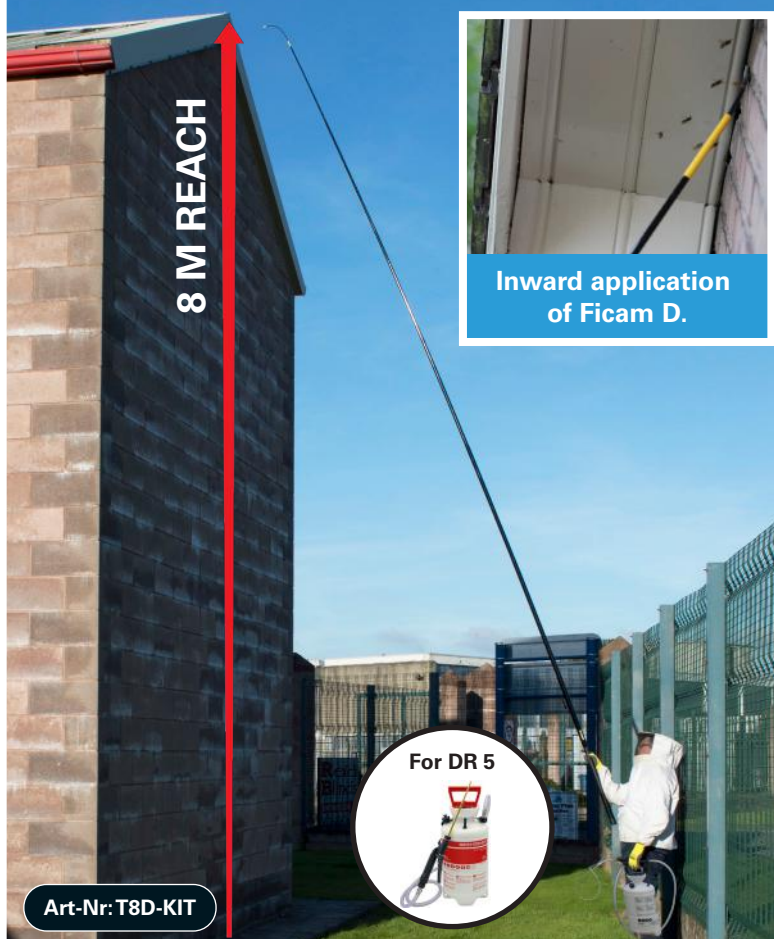

Connects to a Birchmeier DR 5 compression duster.

### Quick fit universal connector




Wood treatment.



Japanese Knotweed treatment.



Brown Tail moth larvae treatment.

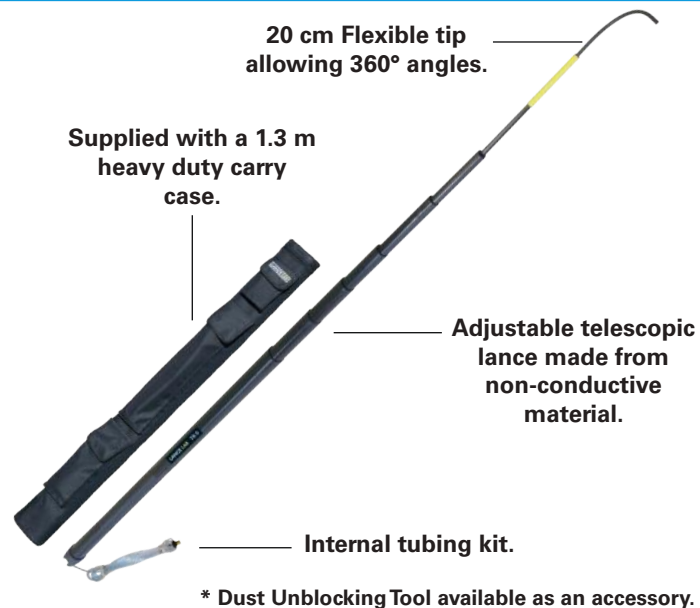

## Features

- Allows precision application at height.
- Lance has a working height of 1.5 m to 8 m.
- Reduces the need for access equipment.
- Reduces the risk of injury from using ladders.
- A liquid conversion kit is available for T8 D / XL 8 lances (Art-Nr: T8S-ULCK).
- The T8 S lance includes a flat fan tip and adjustable cone nozzle.



# AEROSOL 3




## Precision aerosol lance

**Telescopic lance for use with Digraïn Wasps & Hornets Destroyer, Bayer Crawling Insect Killer spray and other similar aerosols.**


### Features

- Supplied with 1 x Flat Fan tip, 1 x Cone tip, plus 1 x Crack & Crevice nozzle kit.
- Connects to any common 4 mm aerosol male valve.
- Particularly useful in attics / lofts and other confined spaces.
- Reduces the need for walking boards in unfloored attics.
- Allows precision application of aerosol products.
- Enables crack & crevice treatments in hard to reach spots.
- Supplied with cleaning tool to flush tubing.

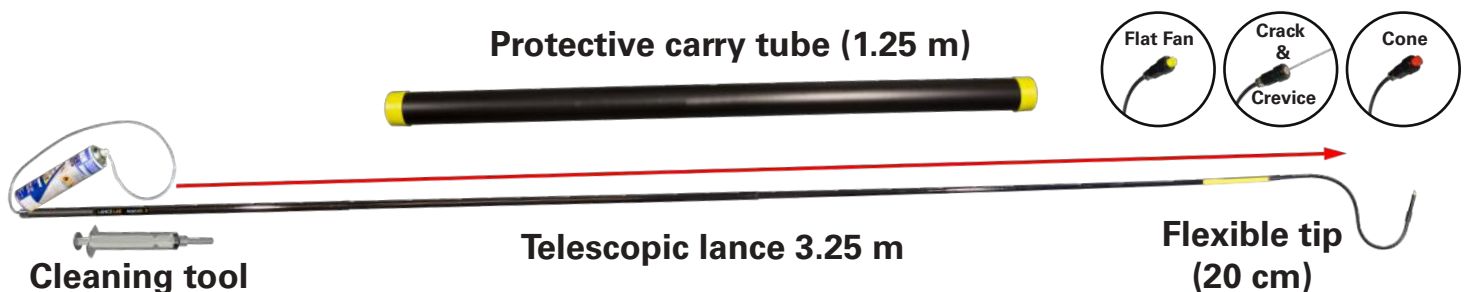


# Mini-Flex for DR 5

## 54 cm flexible dusting tool.

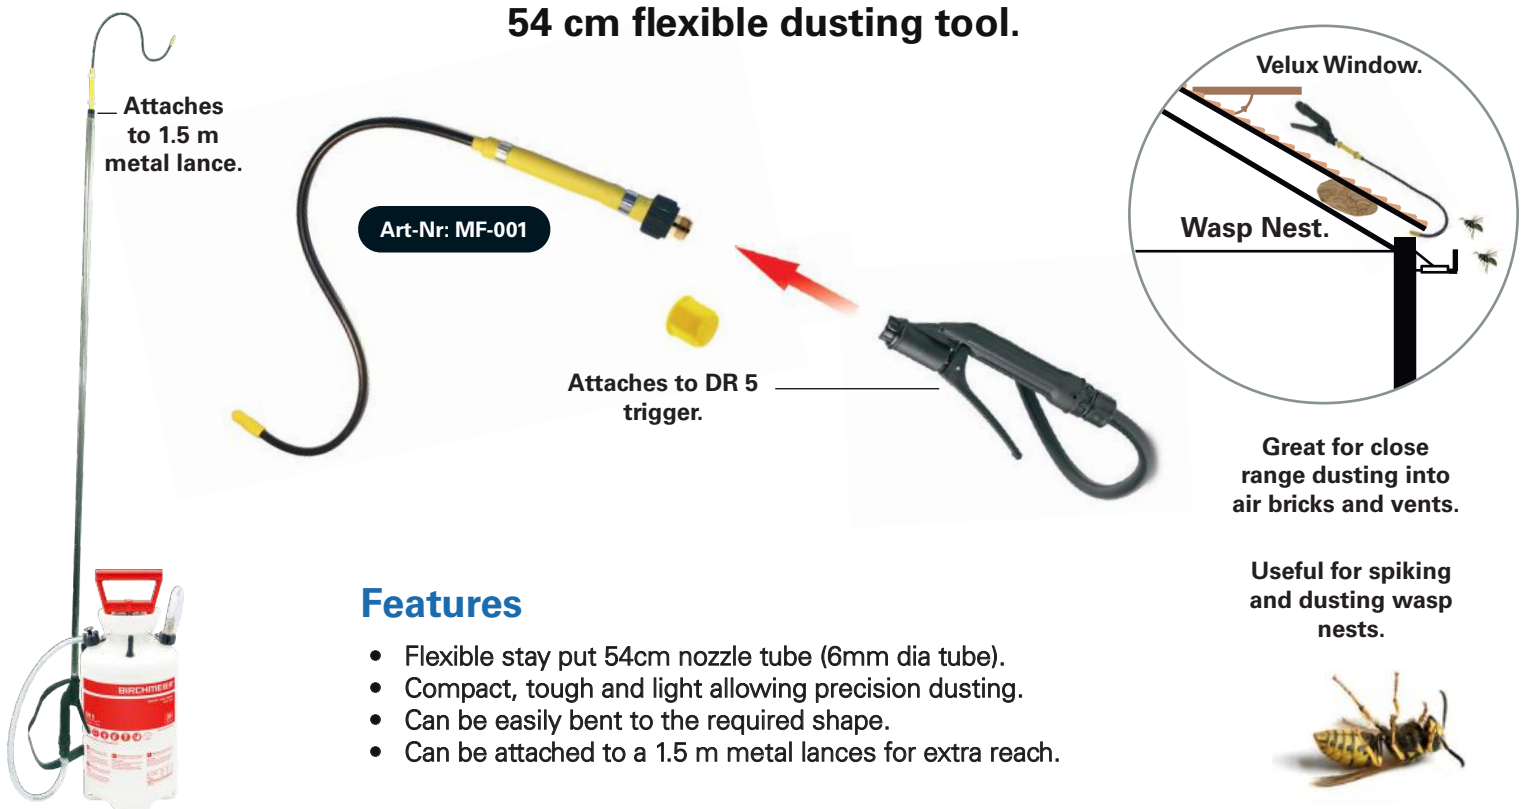



# Flexible Aerosol Straws

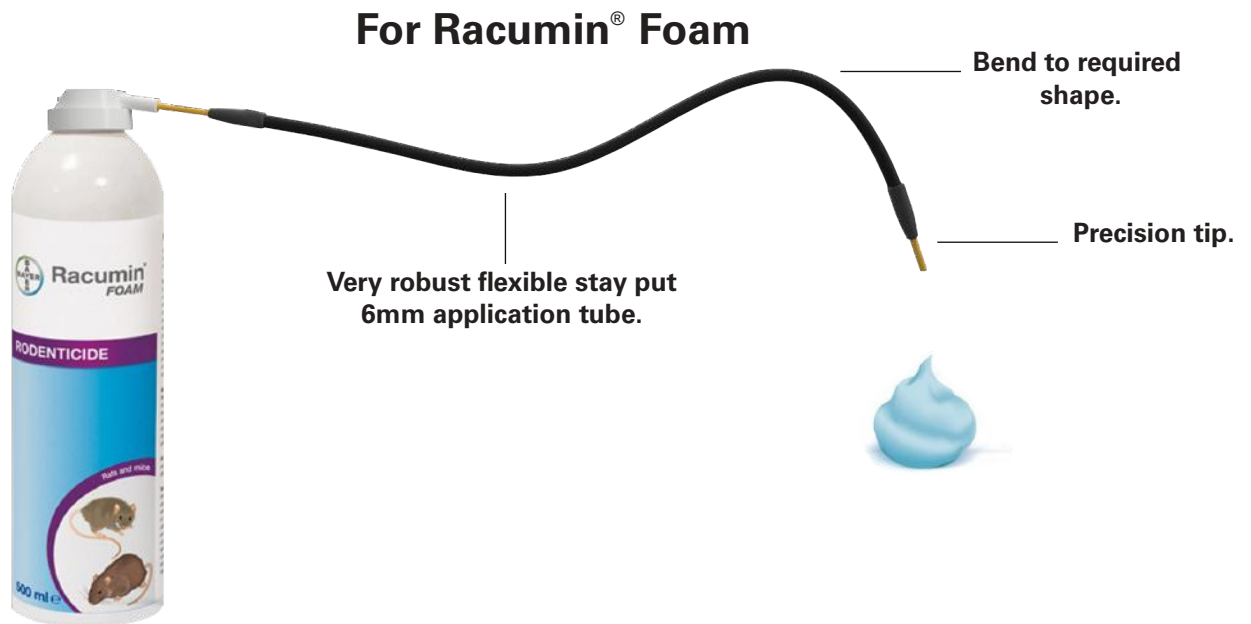

**Also fits**

**other standard aerosols**

\*standard 4 mm male aerosol valves



For Crack & Crevice application.

## Features

- Easily bent to required shape.
- 360° spraying capability.
- Robust and chemical resistant.
- Great for hard to reach spots.
- Also suitable for DE aerosols.
- Useful for lubricants.



## Multi-pack contents

(a) 1 x 60 cm Straw

(b) 1 x 30 cm Straw

(c) 1 x Cleaning tool


(d) 2 x Standard 4mm actuator cap & connectors



Art-Nr: FS-KIT

# AR *P*<sup>RO</sup> Bulb Duster

Unique design with separate powder chamber and bulb pump creating maximum performance.

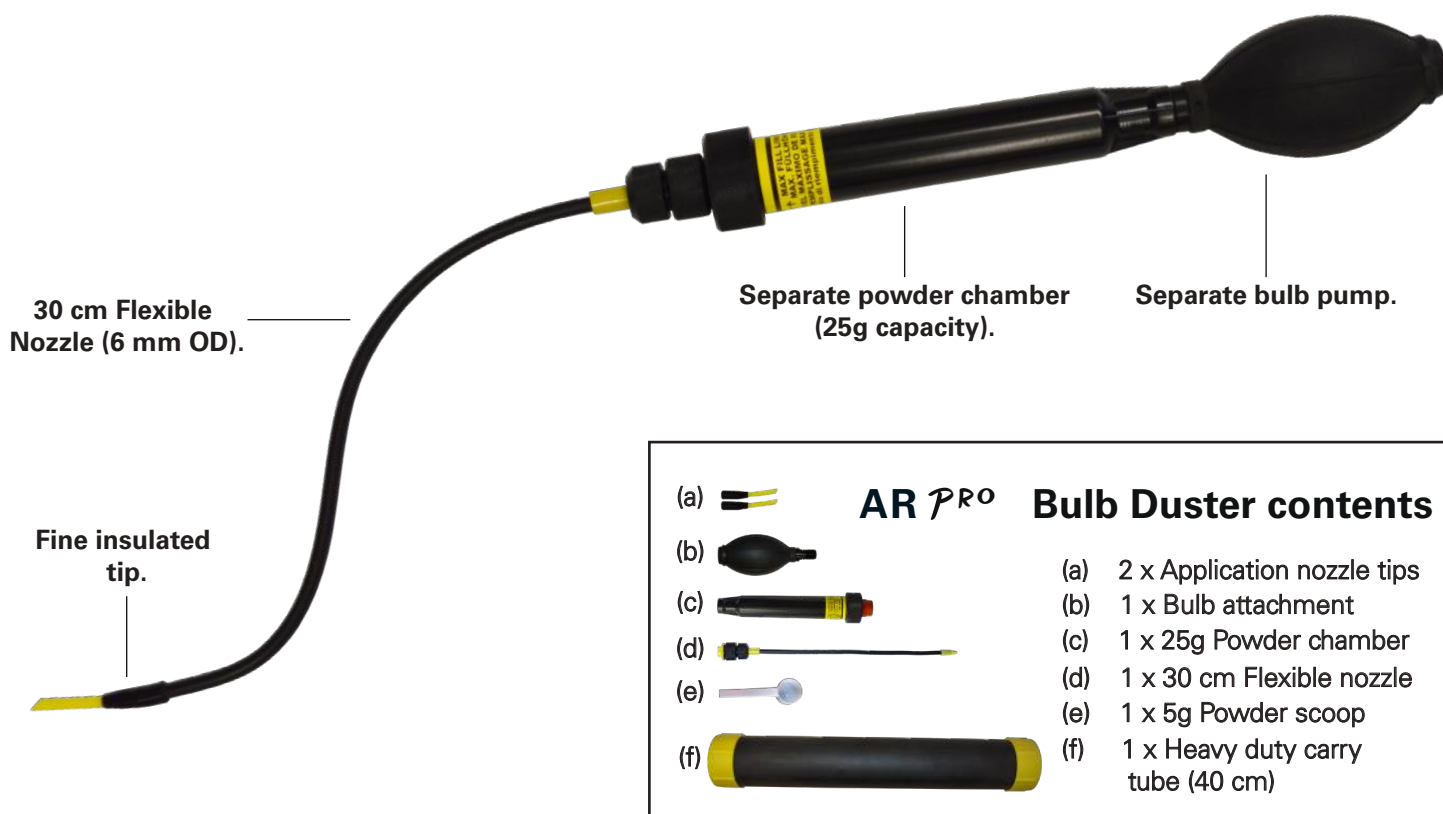

Art-Nr: ARPB

## Features



- Powder chamber is separate from the bulb pump for maximum performance.
- Easy to fill and empty.
- Easy to check powder level.
- 30 cm Flexible nozzle for reaching difficult spots.
- Push fit tip for fine work.
- Insulated for safe use in electric sockets.
- Packs into compact sealed carry tube (40 cm).
- Useful for bed bug treatments.
- In addition to insecticide dust, it is also great for applying DE powder.

